

AMBELLA

PROFILES COLLECTION PROFILES PLUS COLLECTION

Profiles is a collection of silhouettes, styling details, and sizes that can be combined to create the perfect individual piece of upholstery.

Use the following 6 steps to create your perfect custom piece.

4200 Cheyenne Drive | Archdale, NC 27263 | 877.242.3939

AMBELLAHOME.COM

STEP 1: SELECT YOUR DEPTH

PROFILES IS AVAILABLE IN 2 DEPTHS:

Choose **PROFILES 37"/94cm** overall depth (22" seat depth) for a traditional, classic sit.

OR

Choose **PROFILES PLUS 41"/104cm** overall depth (25.5" seat depth) for a more casual, relaxed sit.

STEP 2: SELECT YOUR ARM STYLE



4001 Sloped Roll Arm
(37"/94cm Depth)

4101 Sloped Roll Arm
(41"/104cm Depth)



4002 Panel Roll Arm T Cushion
(37"/94cm Depth)

4102 Panel Roll Arm T Cushion
(41"/104cm Depth)



4003 Panel Roll Arm
(37"/94cm Depth)

4103 Panel Roll Arm
(41"/104cm Depth)



4004 Sloped English Arm
(37"/94cm Depth)

4104 Sloped English Arm
(41"/104cm Depth)



4005 English Arm
(37"/94cm Depth)

4105 English Arm
(41"/104cm Depth)



4006 Track Arm - 4" wide
(37"/94cm Depth)

4106 Track Arm - 4" wide
(41"/104cm Depth)



4007 Track Arm T Cushion - 4" wide
(37"/94cm Depth)

4107 Track Arm T Cushion - 4" wide
(41"/104cm Depth)



4008 Modern Roll Arm
(37"/94cm Depth)

4108 Modern Roll Arm
(41"/104cm Depth)



4009 Modern Roll Arm T Cushion
(37"/94cm Depth)

4109 Modern Roll Arm T Cushion
(41"/104cm Depth)



4010 Wide Track Arm - 7" wide
(37"/94cm Depth)

4110 Wide Track Arm - 7" wide
(41"/104cm Depth)



4011 Sloped Track Arm - 4" wide
(37"/94cm Depth)

4111 Sloped Track Arm - 4" wide
(41"/104cm Depth)



4012 Flared Arm
(37"/94cm Depth)

4112 Flared Arm
(41"/104cm Depth)



4013 Shaped Arm
(37"/94cm Depth)

4113 Shaped Arm
(41"/104cm Depth)


STEP 3: SELECT YOUR PIECE SIZE




-10 Ottoman




-11 Chair

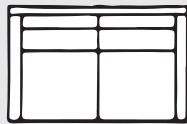


-12 Loveseat

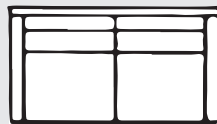


-13 Sofa

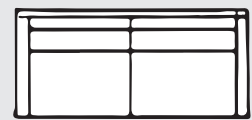


-14 Sofa




-15 Sofa



-16 Sofa




-17 Sofa

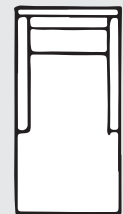


-18 Chaise


SECTIONAL

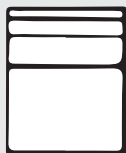


-25 Armless
Chair

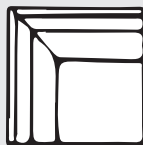


-26
Corner

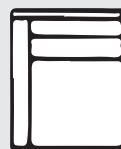


-27 Left
Arm Chair

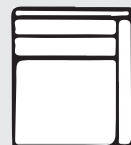


-28 Right
Arm Chair

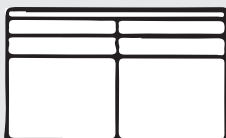


-30 Armless
Loveseat

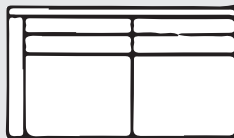


-31 Left Arm
Loveseat

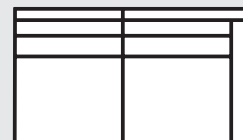

-32 Right Arm
Loveseat

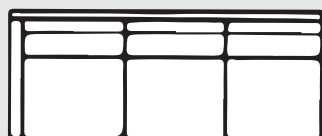


-35 Left Arm Sofa

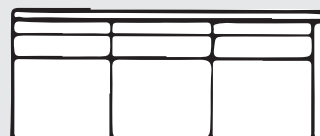


-36 Right Arm Sofa

* ILLUSTRATED RENDERINGS ARE NOT TO SCALE.


SECTIONAL

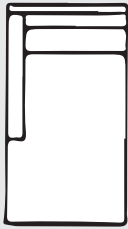


-37 Left
Arm Chaise

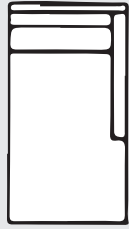


-38 Right
Arm Chaise

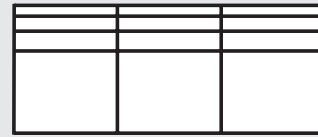


-40 Armless
Sofa

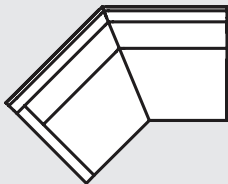


-41 Left Arm
Wedge

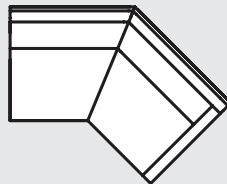


-42 Right Arm
Wedge

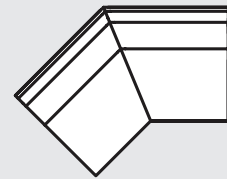


-43 Armless
Wedge

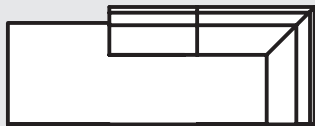


-47 Left Long
Back Chaise

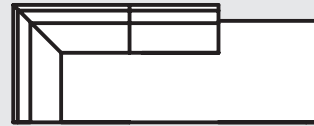


-48 Right Long
Back Chaise

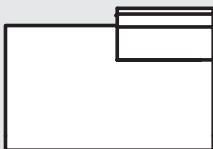


-51 Left
Bumper Chaise

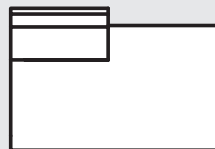


-52 Right
Bumper Chaise

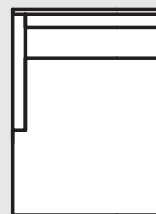


-57 Left Arm
Wide Chaise

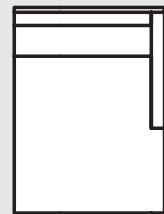

-58 Right Arm
Wide Chaise

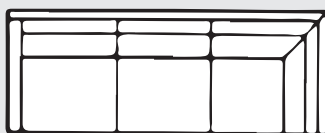

-65 Left Arm
Right Corner Sofa

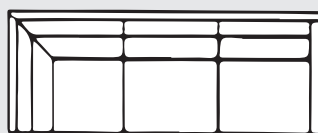

-66 Right Arm
Left Corner Sofa



-70 Large
Ottoman

* ILLUSTRATED RENDERINGS ARE NOT TO SCALE.

STEP 4: SELECT YOUR BACK PILLOW STYLE AND HEIGHT



KB Knife Edge Back Pillow -
Standard 37" height



BB Boxed Back Pillow -
Standard 37" height



TKB Tall Knife Edge Back Pillow - 40" height



TBB Tall Boxed Back Pillow - 40" height

STEP 5: SELECT YOUR FOOT OR SKIRT



WF Wedge Foot



BF Block Foot -
4" wide



WBF Wide Block Foot -
7" wide



PB Plinth Base
(upcharge applies)



EF English Foot



TF Tapered Foot



TTL Tall Turned Leg



BWF Brass Wedge Foot



BCL Brass Cone Leg



STL Stainless Steel Tall Leg



BTL Brass Tall Leg



CNL Cylinder Nickel Leg



CBL Cylinder Brass Leg



WS Waterfall Skirt



KS Tall Kick Pleat Skirt

STEP 6: SELECT WELT OR WELTLESS

POSSIBLE CONFIGURATIONS



4006-35 PROFILES LEFT ARM SOFA
4006-26 PROFILES CORNER
4006-36 PROFILES RIGHT ARM SOFA
 Track Arm, Boxed Back Pillow, Bench Seat Cushion,
 Weltless, Block Foot



4006-35 PROFILES LEFT ARM SOFA
4006-38 PROFILES RIGHT ARM CHAISE
 Track Arm, Boxed Back Pillow, Bench Seat Cushion,
 Weltless, Block Foot



4009-35 PROFILES LEFT ARM SOFA
4009-66 PROFILES RIGHT ARM LEFT CORNER SOFA
 Modern Roll Arm T Cushion, Boxed Back Pillow,
 Tapered Foot, Welted



4008-15 PROFILES MODERN ROLL ARM SOFA
 Modern Roll Arm, Boxed Back Pillow, Wedge Foot



4005-15 PROFILES ENGLISH ARM SOFA
 English Arm, Knife Edge Back Pillow, Waterfall Skirt,
 2 Seat Cushions



4106-41 PROFILES PLUS LEFT ARM WEDGE
4106-42 PROFILES PLUS RIGHT ARM WEDGE
 Track Arm, Boxed Back Pillow, Block Foot, Weltless



4002-11 PROFILES PANEL
ROLL ARM T CUSHION CHAIR
 Panel Roll Arm T Cushion, Boxed
 Back Pillow, Wedge Foot



4101-11 PROFILES PLUS
SLOPED ROLL ARM CHAIR
 Sloped Roll Arm, Boxed Back
 Pillow, English Foot



4107-35 PROFILES PLUS LEFT ARM SOFA
4107-66 PROFILES PLUS RIGHT ARM LEFT CORNER SOFA
 Track Arm T Cushion, Boxed Back Pillow, Tapered Foot



4107-41 PROFILES PLUS LEFT ARM WEDGE
4107-30 PROFILES PLUS ARMLESS LOVESEAT
4107-42 PROFILES PLUS RIGHT ARM WEDGE
 Track Arm T Cushion, Boxed Back Pillow, Weltless,
 Tapered Foot



4110-31 PROFILES PLUS LEFT ARM LOVESEAT
4110-66 PROFILES PLUS RIGHT ARM LEFT CORNER SOFA
 Wide Track Arm, Boxed Back Pillow, Weltless,
 Wide Block Foot